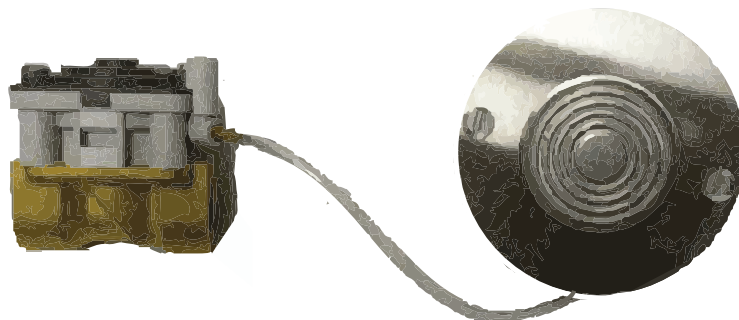


**905101****AQUALISA TIMED FLOW CONTROL KIT**

Dimensional Data (mm) are subject to manufacturing tolerances and change without notice

**ENGINEERING SPECIFICATION**

- Kit consists of:
  - Air operated solenoid valve
  - Push button
- Easily adjusted flow delivery
- Adjustable from 5 secs to 60 secs
- Factory preset to 30 secs

**TYPICAL INSTALLATION - PANEL-MOUNT**

1. Prepare the panel by cutting a hole approximately 42mm in diameter. Mount the push button in the hole as per Fig. 1
2. Run the plastic air tube from the pneumatic valve position, allowing enough slack to facilitate servicing if required.
3. Fit the pneumatic valve into the pipe work, ensuring that the arrow on the brass body points in the direction of flow.
4. Remove the cap nut and pass the air tube through the hole. Push the end of the air tube over the nozzle at the base of the valve. Replace the cap nut and tight.

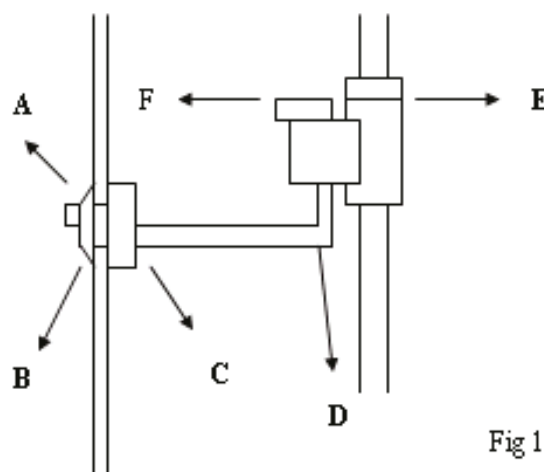


Fig 1

A – Push Button Assy.

B – Rubber Washer

C – Back Nut

D – Air Tube

E – Pneumatic Valve

F – Adjusting Screw