



INSTALLATION & MAINTENANCE

PLAS-316 - Plaster/Solids Trap

INSTALLATION GUIDELINES

Plaster/Solids Traps are to be installed in a convenient position under the sink and away from electrical and/or electronic devices. The unit requires sufficient headroom for removal/emptying of the inner solids trap bucket.

The sink dropper is to be of sufficient length to ensure splashing does not occur. It must have a loose nut connection to the waste outlet for removal. This allows the inner trap bucket to be removed and cleaned.

Allow a minimum of 350mm gap between the bottom of the sink and top of the tarp for removable purposes.

The outlet must have a loose nut connection located as close as practicable to the unit for removal and cleaning purposes.

The outlet is to have a greater charge capacity than the inlet to prevent overflow.

CLEANING INSTRUCTIONS

Cleaning frequency is governed by the type of solids and liquids discharged into the trap, but it is recommended that the maintenance and cleaning of the removable trap occur bi-monthly and the overall trap be removed and cleaned annually.

All installations are to comply with the relevant Australia/New Zealand standard and local government requirements.