



Z882 Channel & P882-HDG/HDS/HDF Frame

Z882 Channel & Frame Assembly



1. Set out Parts
Part A - Z882 Channel



1. Part B - P882-HDF/HDG/HDS
Frame




1. Part C -
PN# 669558089 Assembly Nuts
PN# 669558219 Assembly Screws



2. Lay Frame on Channel. Position
frame so it does not cover the
female end of channel.




3. The countersunk holes in the
frame will now line up with the
holes in the channel.

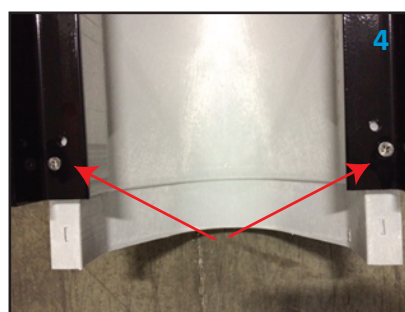

4. Insert PN# 669558219 Assembly
Screws. Attach with
PN# 669558089 Assembly Nuts



5. Hold nut with fingers, tighten
bolt until secure. Repeat for all
counter sunk hole on frame.

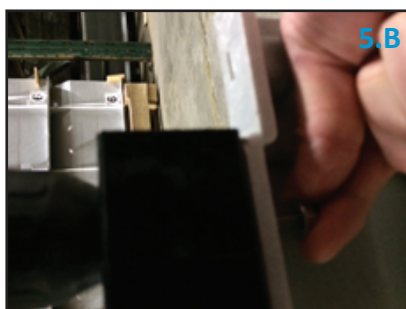

5.



6. If this channel is to attach to the
next channel in the run, do not
insert bolt until it is attached to the
female end of the next channel.



ZURN.COM.AU

ZURN AUSTRALIA HEAD OFFICE
49 LAKESIDE DRIVE BROADMEADOWS VIC 3047
PHONE: 1300 00 ZURN FAX: 03 9357 1455

INST2017_Z882FRM REV. 08/17