




## INSTALLATION INSTRUCTIONS MODEL 350DA

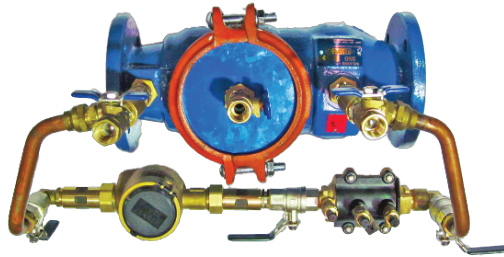

### 100MM DOUBLE DETECTOR CHECK VALVE *With A 20mm By-pass, With Water Meter Or Spacer*

#### Items included in box:

- 1x 100mm Double Check Valve With #1 RPZ Check Valve With 2 X Compressed Unions Pre-plumbed
- Right Hand Bend
- Left Hand Bend
- 1x 20mm Water Meter Spacer With Female Couplings
- Alternatively 20mm Water Meter Nsw Type With 2 Female Couplings
- 1x Pre-plumbed 20mm Double Check Valve With 2 X Ball Valves & Hex Nipple
- 1x Ball Valve Connected To 90 Degree Male Elbow

**Assembly valve as pictured (note flow direction)**



1. Connect Ball Valve 1 to Ball Valve 2 with water meter or spacer, keep in mind that Ball Valve 1 and 3 must point vertical once secured
2. Screw right hand bend and left hand bend to Ball Valve 3 and 1 as pictured until they are parallel to compression points 1 and 2
3. Secure and now valve is ready to test