


## LWG-WF-CRT\*

### WATERFREE CARTRIDGE

Dimensional Data (mm) are Subject to Manufacturing Tolerances and Change Without Notice

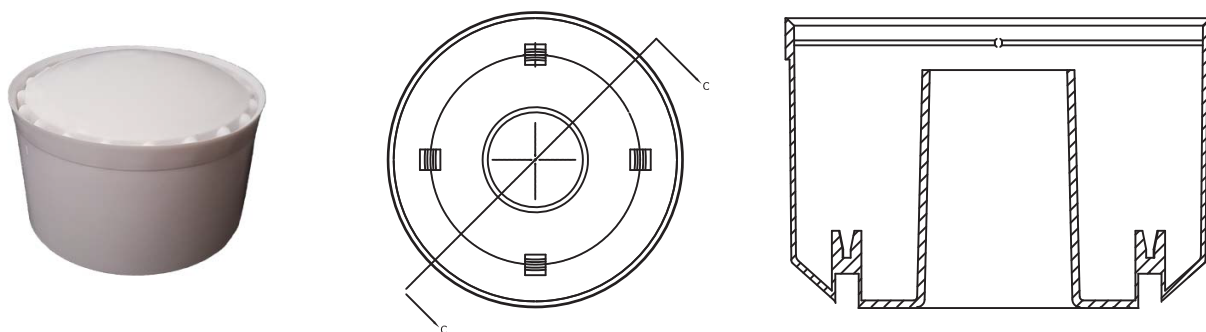

\*LWG-WF-CRT replaces product 1-ECOT (Waterless Eco Trap)

### ENGINEERING SPECIFICATION

- For use with Zurn WaterFree Urinals and Waterless Urinals
- The Zurn WaterFree Cartridge will retain sediments and acts as a filter
- Depending on use, the cartridge will need to be replaced between 1 and 6 times per year
- Compatible with Extractor Tool 1-EXT
- Use in conjunction with Zurn AquaGreen Urinal sealant liquid - there is no need to refill daily
- Zurn AquaGreen maintains a sanitary, environmentally friendly and odor-free installation. No special tools are required to maintain the trap seal

#### HOW IT WORKS:

1. Urine flows down the urinal walls into the WF cartridge which is inserted in the drain
2. In the WaterFree Cartridge, the urine passes through a floating layer of Zurn AquaGreen urinal sealant, forming a barrier to prevent sewer vapors invading the rest room atmosphere
3. Urine under the AquaGreen layer overflows into the central tube, running through the conventional drain line

#### REFILL INSTRUCTIONS

- Do not remove LWG-WF-CRT for refill
- One 100ml refill will last for approximately 5-6 weeks or 3000 uses
  1. Measure out 100ml of GreenSeal
  2. Pour AquaGreen directly into LWG-WF-CRT towards back of urinal

#### **\*\* Important \*\***

Do not remove the strainer once Zurn AquaGreen is in the trapway

### WATERFREE CARTRIDGE REPLACEMENT

*Remove or exchange the WaterFree Cartridge only as needed. This is indicated by slow urine flow or pooling*

1. Have the Extractor tool, replacement WF Cartridge, a plastic bag and a bucket of hot water ready before you begin
2. Insert Extractor tool into the slots around the edge of the cartridge and ensure it is engaged
3. Slowly & gently lift upwards, and jiggle the tool slightly to loosen the cartridge. Make sure not to pull straight up. Once the WaterFree Cartridge is removed you can spray a deodoriser into the drain to minimize any odor
4. With the WF Cartridge still attached to the Extractor tool, pour any liquid contents into the open urinal drain
5. Deposit used cartridge into your plastic bag, and disengage and remove Extractor tool
6. Dispose of used WF cartridge in an appropriate manner
7. Check drain hole for any sediment accumulation and clean/loosen with any long object or brush
8. Carefully tip the bucket of hot water into drain hole of urinal to flush the previously loosened sediment from waste line before you insert a new WaterFree Cartridge
9. Insert the replacement WF Cartridge into the drain hole of urinal, pressing down below drain hole rim
10. Lastly, fill the WaterFree Cartridge with approximately 400ml of water and then add 100ml of AquaGreen Sealant